



## HALLOWEEN PUMPKIN CARVING SET

### HALLOWEEN PUMPKIN CARVING SET

Operating and safety information

#### KÕRVITSA LÕIKAMISKOMPLEKT

Käsitus- ja ohutusjuhised

#### KOMPLEKTS KIRBJU GREBŠANAI

Lietošanas un drošības norādījumi

#### KÜRBIS-SCHNITZSET



Bedienungs- und Sicherheitshinweise

IAN 458971\_2401



citygate24 GmbH  
Allstädter Straße 8  
20095 Hamburg  
GERMANY

06/2024  
Model No.: 1183-11

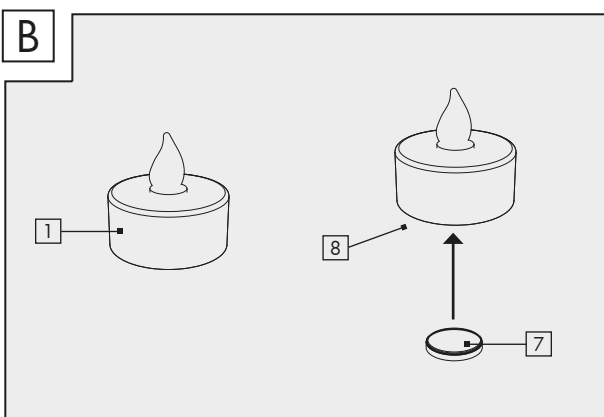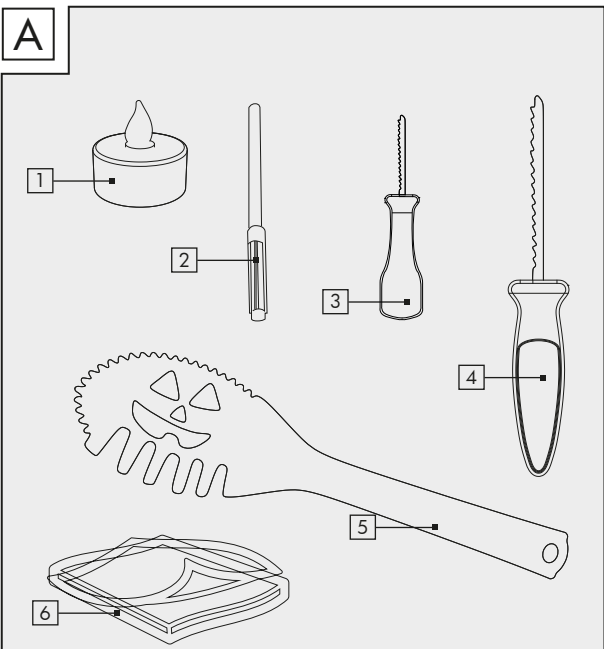

GB

### Halloween Pumpkin Carving Kit

#### Introduction

Congratulations on the purchase of your new product. You have chosen a high-quality product. Please read these operating instructions thoroughly and carefully. These instructions are an essential part of the product and contain important information on first-time use and handling. Always observe all safety instructions. If you have any questions or are unsure how to operate the product, please contact your retailer or service centre. Please keep this manual in a safe place and pass it on to third parties where necessary.

#### Explanation of symbols

- Read the operating instructions!
- Issue date of user instructions (month/year)
- Date of manufacture (month/year)
- Direct current
- Risk of fatal injury and accidents for infants and children!
- Observe warning notices and safety instructions!
- Explosion hazard!
- Wear protective gloves!
- This symbol indicates that the product operates with safety extra-low voltage (SELV / PELV, protection class III).
- Suitable for indoor use only
- 1x CR2032 battery included in delivery
- Battery included
- WARNING: Contains coin/button battery. Hazardous if swallowed – see instructions.
- Keep out of reach of children
- Do not use violence
- Never use different systems, brands and types at the same time!
- Do not insert the wrong way round, observe polarity (+ / -)!
- Do not throw into the fire!
- Do not throw it into the water!
- Do not short-circuit! Batteries can explode or leak.
- Never mix new and used batteries!
- Do not recharge!
- Do not disassemble / open!
- Dispose of packaging and product in an environmentally friendly manner!
- Risk of environmental damage from incorrect disposal of (rechargeable) batteries!
- Packaging made of FSC-certified wood mix

With the CE label, the manufacturer confirms that this product complies with the applicable European directives.

#### Intended use

Not suitable for children under 12 years. This product is only suitable for decorative purposes. This product is intended exclusively for indoor use in dry and enclosed spaces. The LED decorative tea light must not be placed inside the pumpkin when it is not in an enclosed space. The product is not suitable for general indoor lighting in the home or for commercial use. This product is intended for use in private households only. Any type of use other than that described above or any modification of the product is prohibited and likely to cause damage or even personal injury. The manufacturer or retailer accepts no liability for loss or damage that occurs as a result of improper or incorrect use.

#### Included in package

- 1x LED decorative tea light
- 1x pumpkin scraper
- 1x large saw
- 1x small saw
- 1x pen
- 1x battery (CR2032)
- 6x carving templates
- 1x user instructions

#### Description of parts

- |                          |                   |
|--------------------------|-------------------|
| LED decorative tea light | Pumpkin scraper   |
| Pen                      | Carving templates |
| Small saw                | Battery           |
| Large saw                | On/Off switch     |

#### Technical specifications

Model number: 1183-11  
Input: 1 x CR 2032, 3 V , 0,08 W  
Protection class: III  
Light colour: warm white

**Battery manufacturer:**  
Name: SUZHOU XINIVZHOU ELECTRONICS CO., LTD.  
Address: SHANJI ROAD 158, XIANGCHENG DISTRICT, SUZHOU CITY, JIANGSU, CHINA.  
Trade name: WARRIORS CR2032 3V LITHIUM CELL  
www.lzhoudianzi.com.cn  
E-mail: 593221152@qq.com  
Contact: Qiankeyun

Contact: Qiankeyun

#### Safety instructions

##### Safety instructions

**WARNING!**  
**RISK OF FATAL INJURY AND ACCIDENTS TO INFANTS AND CHILDREN!** Never leave children unsupervised with the packaging material. There is a danger of suffocation from the packaging material. Children often underestimate the dangers. Always keep children away from the product.

**Caution!** Only for use under adult supervision.

**Caution!** Keep tools out of reach of children after use.

- 
- 
- 
- 
- 
- 

##### Safety Instructions for (Rechargeable) Batteries

- RISK OF FATAL INJURY!** Keep (rechargeable) batteries out of the reach of children. If swallowed, seek medical advice immediately!
- EXPLOSION HAZARD!** Never recharge non-rechargeable batteries. Do not short-circuit or open (rechargeable) batteries. They could overheat, cause a fire or explode.
- 
- 
- 
- 
- 
- 
- 
- 

#### Risk of (rechargeable) batteries leaking

- 
- 
- WEAR PROTECTIVE GLOVES!** Leaking or damaged (rechargeable) batteries can cause chemical burns if they come into contact with skin. Therefore, wear suitable protective gloves in such cases.
- 

#### Setup

- Instructions:** Take the product out of its packaging and remove all packing material.
- - 
  -

#### Inserting/replacing the batteries

- RISK OF FATAL INJURY!** Please note that the batteries must not be replaced by adults. Ensure that the battery compartment is firmly closed. Batteries can be lethal when swallowed!
- 
- 
- 
- 
- 

#### Operation

- CAUTION!** Never leave children unsupervised when using the product! Only for use under adult supervision. LED decorative tea light: The ON/OFF 8 switch is located on the bottom of the LED decorative tea light 1 (see Fig. B). Push the switch to the ON position to switch the product on. The flame will now illuminate with a natural flickering effect. Push the switch to the OFF position to switch the product off.

**CAUTION!** Once the LED light or the LED decorative tea light has been placed inside the pumpkin, the pumpkin is no longer suitable for consumption. Pumpkin scraper: The pumpkin scraper 5 (see Fig. A) is designed for removing the flesh and seeds from inside the pumpkin.

Small saw / Large saw: You can use the saws 3 / 4 (see Fig. A) for precise carving.

Pen: You can use the pen 2 (see Fig. A) to transfer the carving template patterns onto the pumpkin.

**CAUTION!** Once you have drawn on the pumpkin with the pen, the pumpkin is no longer suitable for consumption. Carving templates: The carving templates 6 make it easier to design the pumpkin.

#### Cleaning and storage

- 
- 
- 
- 

#### Troubleshooting

- 
- 
- 
- 
- 
- 
- 
- 

#### Disposal

- 
- 
- 

Faulty or used batteries must be recycled in accordance with Directive 2006/66/EC and its amendments. Return batteries and/or the product to the local recycling facilities provided.

**Risk of environmental damage from incorrect disposal of rechargeable batteries!**  
Batteries must not be disposed of as general household waste. They may contain toxic heavy metals\* and are subject to special waste treatment. Batteries and rechargeable batteries that are not permanently fixed inside the product must be removed before disposal of the product

and disposed of separately. Please ensure batteries/rechargeable batteries are fully discharged when disposed of! Wherever possible, use rechargeable batteries rather than single-use batteries. \*) Marked as followed: Cd = cadmium, Hg = mercury, Pb = lead

#### Warranty

Dear customer, This product comes with a 3-year warranty from the date of purchase. In the event that this product is faulty, you have legal rights against the seller of the product. These statutory rights are not restricted by our warranty as set out below.

#### Warranty terms

The warranty period begins with the date of purchase. Please keep the original receipt in a safe place. It is required as proof of purchase. If a material or manufacturing defect occurs within three years of the date of purchase, we will repair or replace the product for you free of charge, or refund the purchase price, at our discretion. This warranty service is granted provided that the faulty device and the proof of purchase (receipt) are presented within three years, along with a brief written description of the fault and of when it occurred. If the fault is covered by our warranty, we will return the fixed product or send you a new one. No new warranty period shall begin upon repair or replacement of the product.

#### Warranty period and statutory warranty claims

The warranty period is not renewed after a warranty service has been granted. This rule shall also apply for any replaced or repaired parts. Any damage or faults that already existed when buying the product must be reported immediately upon unpacking the product. A fee is charged for any repairs that are carried out after the end of the warranty period.

#### Warranty scope

The device was carefully manufactured according to the strictest quality guidelines and thoroughly tested before delivery. The warranty covers material and manufacturing defects as well as the battery. This warranty does not apply to product parts that are subject to normal wear and tear and can thus be regarded as wearing parts; nor does it cover damage to fragile parts, such as switches or parts made of glass. This warranty is void if the product has been damaged, improperly used or serviced. To ensure proper use, all instructions included in the manual must be followed carefully. All uses and actions that users are discouraged from or warned of in the manual must be avoided under all circumstances. The product is intended for private household use only, and not for commercial activities. The warranty is void, if the product is treated inappropriately, if force is applied, and in the case of any manipulation that is not carried out by our authorised service branch.

#### Warranty processing

- To ensure your request is handled swiftly, please observe the following **Notes:**
- Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries.
  - Please refer to the type plate on the product, an engraving on the product, the cover of the manual (bottom left) or the sticker on the back or base of the product to find out the product number.
  - In the case of any malfunctions or other defects, please call or email the service department indicated below as a first step.
  - After your product has been registered as faulty, you can send it to the specified service address, free of charge. Please include the proof of purchase (receipt) and information about the defect and about when it occurred.

#### Service

Service Great Britain  
Tel. : 00800 80040044  
E-Mail: administration@mynetsend.de

IAN 458971\_2401

Please have the receipt and the article number (e.g. IAN 123456) ready as proof of purchase for all enquiries.

You can find an up-to-date version of the operating instructions at: www.citygate24.de

You can download this and many other manuals, product videos and installation software at [www.lidl-service.com](http://www.lidl-service.com). Scanning the QR code on the front page will take you directly to the Lidl Service web page ([www.lidl-service.com](http://www.lidl-service.com)) where you can access the user instructions by entering the item number (IAN) 123456\_7890.

EE

### Kõrvitsate lõikekomplekt

#### Sissejuhatus

Onnitleme teid üle toote ostu puhul. Olete sellega otsustanud kvaliteetse toote kasuks. Palun lugege see kasutusjuhend täielikult ja hoolikalt läbi. Antud juhend kuulub selle toote juurde ja sisaldab juhiseid kasutuselevõtmiseks ja kasitamiseks. Järgige alati kõiki ohutusjuhiseid. Kui Teil peaks olema küsimusi või olele ebakindlaid toote kasutamise osas, siis võtke palun ühendust oma müügiesindaja või teeninduspunktiiga. Palun hoidke käesolevat juhend hoolikalt alles ja edastage see vajaduse korral kolmandale osapoolle. Alljärgnev toote nimetus: Kõrvitsate lõikekomplekt

#### Märkide selgitus

- Lugege kasutusjuhendit!
- Kasutusjuhendi väljandmise kuupäev (kuu/aasta)
- Valmistamise kuupäev (kuu/aasta)
- Alalispinge
- Elu- ja õnnetusohut väikelastele ja lastele!
- Järgige hoiatus- ja ohutusjuhiseid!
- Plahvatusohut!
- Kandke kaitsekindaid!
- See sümbol tähendab, et toode töötab kaitsevõikepingega (SELV/PELV) (kaitseklass III).
- Sobiv ainult siseruumis kasutamiseks
- Koos 1x CR2032 patareiga
- Koos patareiga
- HOIATUSJUHIS: Sisaldab nõppelementi. See on allaneelamisel teraviskahjustav – vt instruksioonid.
- Hoida lastele kättesaamatus kohas
- Ärge kasutage vägivald!l
- Ärge kunagi kasutage samaaegselt erinevaid süsteeme, kaubamärke ja tüüpe!
- Ärge sisestage valesti, järgige polarisust( + / - )!
- Ärge visake tule!
- Ära viska seda vette!

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

GB

Ärge lühistage! - Patareid võivad plahvatada või lekkida.

Ärge kunagi segage uusi ja kasutatud patareisid!

Ärge laadige!

Ärge võtke lahti / avage!

Käideldge pakend ja toode keskkonnasõbralikult!

Keskonnakahjustused patareide/akude vale jätmekäitluse tõttu!

FSC sertifitseeritud segu-puidust pakend

CE-märgisega kinnitat tööaja, et see toode vastab kehtivatele Euroopa direktiividele.

#### Sihipärane kasutamine

Sobiv ainult alates 12.aastastel lastele. See toode on sobiv ainult dekoratiivseks otstarbeks. See toode on sobiv kasutamiseks ainult sisetingimustes, kuivades ja suletud ruumides. LED-dekoratsiooni-teetuled ei tohi paigutada kõrvitsa sisse, kui see asub väljapoole suletud ruumi. Toode ei ole sobiv ruumide valgustamiseks kodumajapidamises ning arialaes kasutamiseks. See toode on ette nähtud ainult kodumajapidamistes kasutamiseks. Muu kasutamine kui eelnevalt kirjeldatud või toote muutmine ei ole lubatud ja see võib tekitada materiaalseid kahjusid või isegi isikukahjusid. Tootja või edasimüüja ei vastuta mittesihipärastest või valest kasutamisest tekkivate kahjude eest.

#### Tarnekomplekt

- 1x LED-dekoratsiooni-teetuli
- 1x kõrvitsakaabis
- 1x suur saag
- 1x väike saag
- 1x pliats
- 1x patarei (CR2032)
- 6x lõikemall
- 1x kasutusjuhend

#### Osade kirjeldus

- |                           |                     |
|---------------------------|---------------------|
| LED-dekoratsiooni-teetuli | Kõrvitsakaabis      |
| Pliats                    | Lõikemallid         |
| Väike saag                | Patarei             |
| Suur saag                 | SEES-/VÄLJAS-lüliti |

#### Tehnilised andmed

Mudelil number: 1183-11  
Sisend: 1 x CR 2032, 3 V , 0,08 W  
Kaitseklass: III  
Valguse värvus: soevalge



